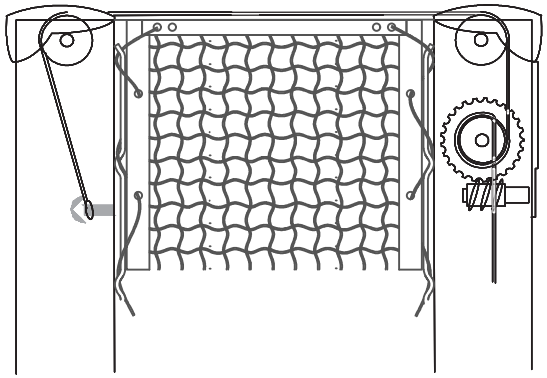

NET INSTALLATION *(no tools required)*

* Feed the swaged end of the cable through the non winder post cap and onto the internal post hook.
* Feed the non swaged cable end through the winder post cap and into the hole in the drum gear (no need to cut excess cable off).
* Tension the cable by hand pulling so there is minimum cable to wind around the drum.
* Turn the handle to take up the cable tension. The drum will only need a few revolutions to tension the cable.

COMPONENTS

QTY	ITEM
1	NON WINDER POST
1	WINDER POST
2	POST CAPS
1	NAME PLATE
1	WINDER HANDLE
1	INTERNAL MECHANISM

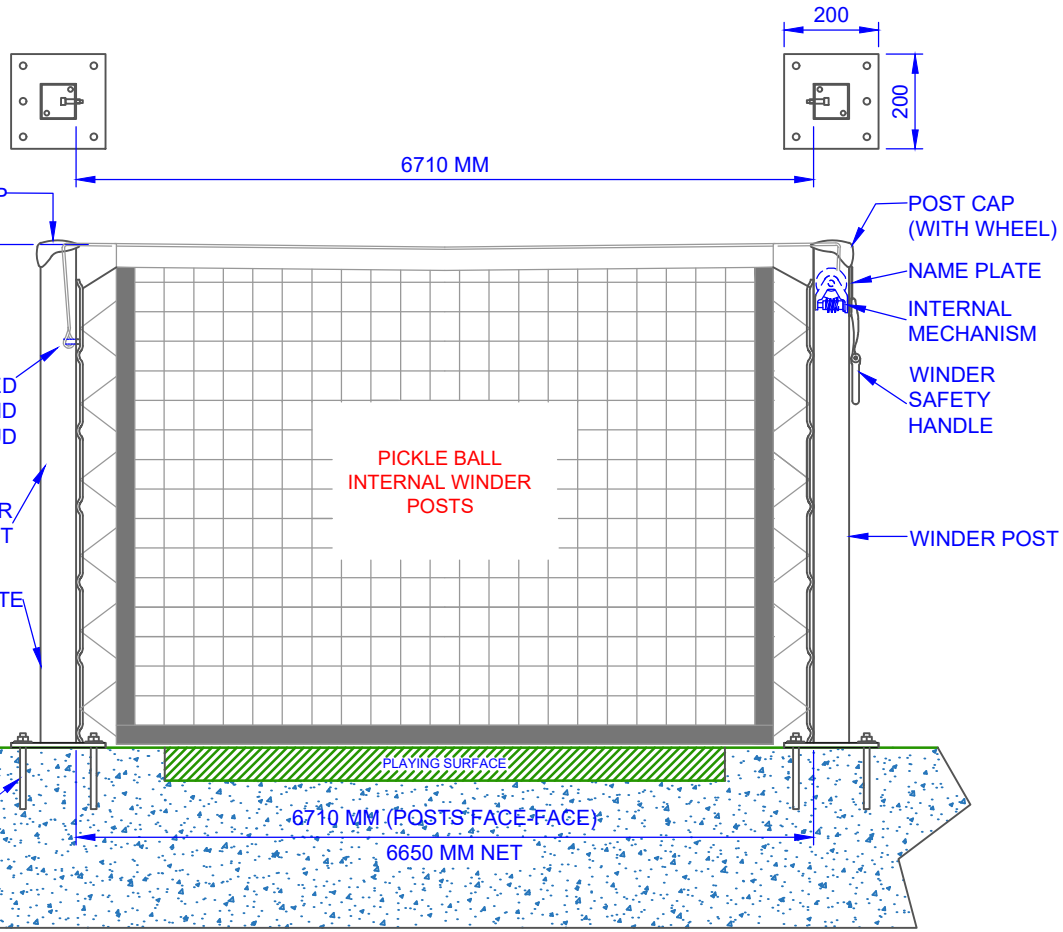

NOTE:
MUST USE S/S STUDS IF THE SITE IS NEAR COASTAL REGION

5 X M12 CHEMSET ANCHOR STUDS & CHEMSET REO 502 WITH LEVELING NUT & WASHER.
DRILL AND EPOXY GROUT 110 MM INTO MIN. 125 SLAB
NOTE: ANCHORS NOT SUPPLIED WITH THE PRODUCT

TITLE:
PBI-BP INTERNAL WINDER PICKLE BALL ON BASE PLATE

DRAWING NUMBER:
PBI-BP ASSEMBLY

Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559
24 Ern Harley Drive
Burleigh Heads Qld 4220
Phone: (07) 5593 4494
Fax: (07) 5593 4338
Website: www.playhardsports.com.au
Email: email@playhardsports.com.au